



# User manual

**AMBIANO®**

**MILK HEATER / FROTHER**



# Contents

|                                           |           |
|-------------------------------------------|-----------|
| <b>Explanation of symbols .....</b>       | <b>3</b>  |
| <b>Important safeguards .....</b>         | <b>4</b>  |
| Electrical safety and cord handling ..... | 4         |
| Usage Conditions and Restrictions .....   | 5         |
| <b>Parts list .....</b>                   | <b>7</b>  |
| <b>Getting started .....</b>              | <b>8</b>  |
| Before first use .....                    | 8         |
| Assembly.....                             | 8         |
| <b>Instructions for use .....</b>         | <b>9</b>  |
| Using the Milk Heater / Frother.....      | 9         |
| <b>Hints and tips.....</b>                | <b>10</b> |
| <b>Serving suggestions .....</b>          | <b>10</b> |
| <b>FAQs.....</b>                          | <b>11</b> |
| <b>Other useful information.....</b>      | <b>12</b> |
| Cleaning and maintenance .....            | 12        |
| <b>Storage.....</b>                       | <b>12</b> |
| <b>Technical data.....</b>                | <b>13</b> |
| <b>Declaration of conformity.....</b>     | <b>13</b> |
| <b>Disposal.....</b>                      | <b>13</b> |

## Explanation of symbols

The following symbols and signal words are used in this user manual, on the product or on the packaging.

 **WARNING!**

This signal symbol/word indicates a hazard with a medium degree of risk, which could lead to death or serious injury if it is not avoided.

 **CAUTION!**

This signal symbol/word indicates a hazard with a low degree of risk, which could lead to minor or moderate injury if it is not avoided.

**NOTE**

This signal symbol/word warns of possible material damage.



This symbol provides you with useful additional information about assembly or operation.



Declaration of conformity (refer to “Declaration of conformity” section) Products that are marked with this symbol fulfil all applicable Community regulations of the European Economic Area.



Protection Class I: The power swivel base of these appliances have their chassis connected to electrical earth by a separate earth conductor.

## Important Safeguards

### READ ALL INSTRUCTIONS



Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. If applicable, pass these instructions on to the next owner of the appliance.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

#### **Electrical safety and cord handling**

- Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating label. If this is not the case, contact the after sales support line and do not use the Milk Heater / Frother.
- To protect against fire and electric shock, do not immerse the cord, plug, power base or the Milk Heater / Frother body itself in water or other liquid. Do not expose the electrical connections to water.
- The cord should be run in such a way that there will be no risk of anyone pulling it inadvertently or tripping over it.
- Do not kink, bend, squash, strain or damage the power cord and protect it from sharp edges and heat.
- Do not let the cord hang over the edge of a table or bench top. Do not let it touch hot surfaces.
- Do not pick up or operate the appliance if the power supply cord or plug is damaged, or after it malfunctions or has been dropped or damaged in any way.
- In case of damage, contact the after sales support line for advice.
- A damaged cord or plug must be replaced by the manufacturer or a qualified person in order to avoid a hazard.
- Make sure all electrical connections are clean and dry before switching on.
- Do not use this appliance in conjunction with an extension cord.
- Unplug the appliance from the power outlet when not in use and before cleaning, servicing, maintenance or moving the appliance.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.



## Usage Conditions and Restrictions

- This appliance is intended for domestic use only.
- This product is not intended for commercial use. Do not use it outdoors.
- Only use this Milk Heater / Frother as described in this manual. Any other use is not recommended and may cause fire, electric shock or injury.
- Improper installation and the use of accessories not recommended by the appliance manufacturer may result in fire, electric shock or personal injury and will invalidate your warranty.
- We assume no responsibility for any eventual damages caused by improper or faulty use.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- Children should be supervised to ensure they do not play with the appliance.
- Close supervision is necessary when any appliance is used by or near children.
- Never carry this appliance by the power cord.
- Do not use chemical, steel wool or abrasive cleaners to clean the outside of the unit, as these will scratch the metal surface.
- Do not operate the unit near liquids (kitchen sink, water basins, taps etc).
- Ensure that all the parts are correctly assembled before operation.
- Do not immerse the housing in water or any other liquids.
- When not in use, store your appliance and its instruction manual in a safe and dry place.
- Maintain the appliance in accordance with the instructions to ensure that it functions properly.
- If there is a product malfunction, or if it has been damaged in any way, call the after sales support for assistance.
- Immediately unplug the appliance if fire or smoke is emitted.
- To protect against electric shock do not immerse cord, plug or unit itself in water or any other liquid.

- This appliance features a short power cord to reduce the risk of being entangled, and to reduce the risk of tripping. An extension cord or longer detachable cord is not recommended for use with this product.
- There are no user-serviceable parts inside. Do not attempt to service this product. Please call our after sales support for instructions.
- Never operate the appliance on an uneven surface. Do not place the appliance on a polished wood surface, it could damage the wood.

**⚠ CAUTION!**

**Do not operate the Milk Heater / Frother without milk.**

- Only use the Milk Heater / Frother with the power base provided. Do not use the power base with anything else other than the Milk Heater / Frother.
- Always use your Milk Heater / Frother on a stable, level and heat resistant surface.

**⚠ WARNING!**

**Do not overfill the jug.**

- There are TWO maximum capacities marked inside the jug: the lower one is for frothing milk, the higher one for heating or stirring only. Filling past the indicated maximum levels can cause overflowing during operation.

**⚠ WARNING!**

**Do not touch rotating parts! Risk of injury!**

**⚠ WARNING!**

**Do not leave unattended during use.**

- Always switch off the appliance and unplug it from the power supply.


**⚠ WARNING!**

**Residual heat!**

- Take care when handling the jug after use as the inside bottom of the jug is subject to residual heat after use.

## SAVE THESE INSTRUCTIONS

## Parts list

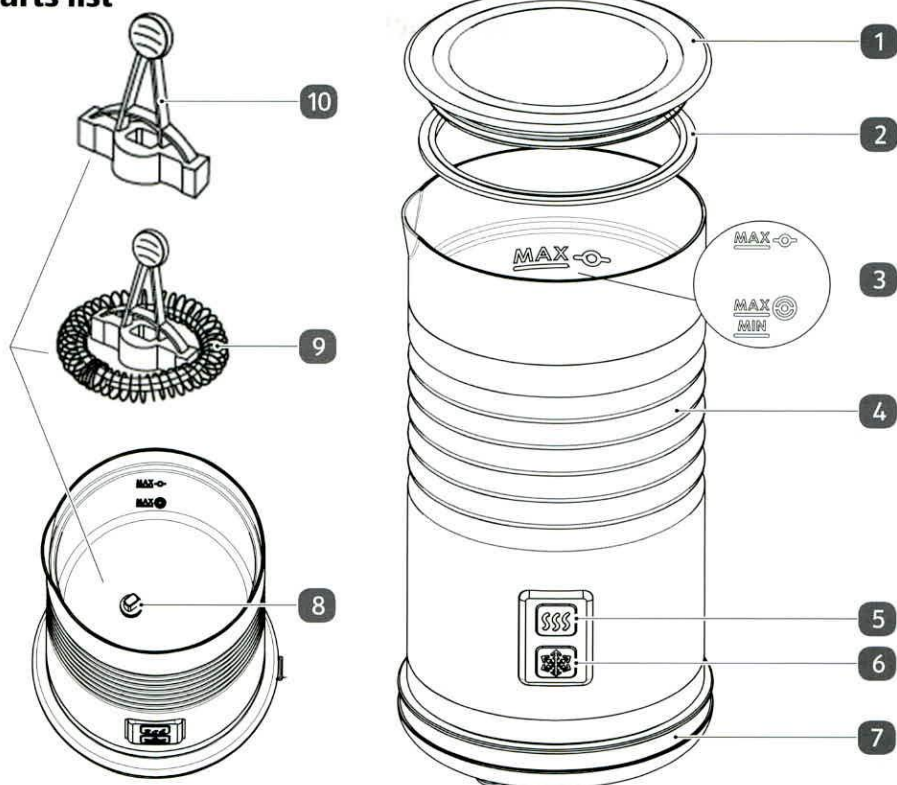

- 1 Transparent lid
- 2 Silicone ring (part of the lid)
- 3 Level markings (the top one for heating/stirring only, the lower one for frothing)
- 4 Housing
- 5 Frothing & heating indicator light
- 6 Frothing indicator light
- 7 Power swivel base with cord
- 8 Shaft for whisk attachment
- 9 Frothing whisk (graphic shown larger)
- 10 Heating / stirring whisk (stored on the inside of the lid, graphic shown larger)
  - User manual / warranty card

## Getting started

### Before first use

- i** Unpack the box with care, keeping all packaging materials until you are satisfied everything is present and in working order.


### **⚠ WARNING!**

**Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.**

- Unwind the cord to its full length and inspect it for damage. Do not use the appliance if any part is damaged. In case of damage, contact our after sales support line for advice on examination, repair or return of the damaged product.
- Clean the jug and the accessories as described under the '**Cleaning and maintenance**' section to remove any dust or residues from the manufacturing process.

### Assembly

- Your new Milk Heater / Frother comes with two whisks, one for frothing and one for heating or stirring milk. When using your Milk Heater / Frother, make sure one of these whisks sits properly on the small shaft inside the frother.

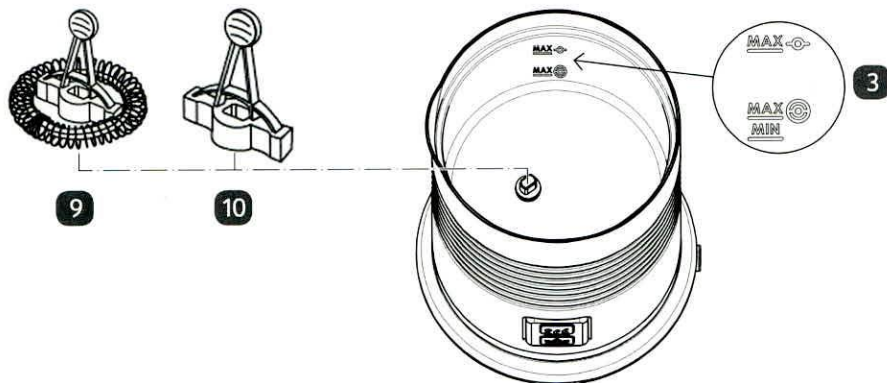

- **Do not overfill!** There are 2 maximum markings **3**: the lower one is for frothing milk, the higher one for heating or stirring only. Filling past these indicated maximum levels can cause overflowing during operation.
- The frothing whisk **9** has a metal spiral ring around a plastic whisk. It comes attached to the inside of the lid.
- The heating/stirring whisk **10** is stored inside the jug and consists of a slightly smaller plastic whisk.



## Instructions for use

### Using the Milk Heater / Frother

| Whisk                                                                            | Function                                             | Maximum capacity | Approximate time (sec.) |
|----------------------------------------------------------------------------------|------------------------------------------------------|------------------|-------------------------|
|  | Frothing only                                        | 115 ml           | 65                      |
|                                                                                  | Frothing & Heating                                   | 115 ml           | 75-95                   |
|  | Heating & Stirring only<br>(a small amount of froth) | 250 ml           | 120-140                 |

1. Choose the appropriate whisk and locate it on the small shaft inside the jug (see 'Assembly').
2. Pour milk into the jug, making sure not to exceed the maximum level marked on the inside of the jug.



Do not fill the jug to the top MAX marking when frothing! The lower MAX marking is for frothing milk, the top marking is the maximum level for heating/stirring milk.

3. Put the lid on top of the Milk Heater / Frother, making sure it is tightly closed.

#### 4.1 Frothing and Heating / Heating & Stirring Only

- Press the HEATING button **5** () the red indicator light will come on; it will start flashing at the end of the process for about 30 seconds.

#### 4.2 Frothing Only / Stirring Only (no heat)

- Press the NO HEAT button **6** () the blue indicator light will come on; it will start flashing at the end of the process for about 30 seconds.



After frothing or heating, allow 1 minute before pouring, and allow approximately 2 minutes before reusing the Milk Heater / Frother so the thermostat can reset.



**Before reuse, make sure to rinse the inside of the jug with water and wipe any residues out of the bottom of the jug with a soft cloth.**

## Hints and tips



Below are some handy hints to help you get the best out of your Milk Heater / Frother.

- Always froth or heat your milk first when preparing a hot drink. While it is operating, prepare your coffee and serve immediately.
- You can froth cold milk with this Milk Heater / Frother without heating it, but you cannot cool down milk in the frother. Without the heating function, the Milk Heater / Frother will maintain the milk's original temperature thanks to the double skinned walls of the appliance.
- Milk heats to approximately 65+/-5°C in the Milk Heater / Frother when the heating function is used. This is the ideal temperature to ensure the flavour of your coffee is not impaired and you can start sipping on your drink without having to wait for it to cool down.
- Keep the whisks in a safe place, out of the reach of young children. They are small parts and can easily be lost or possibly even swallowed.
- The Milk Heater / Frother is designed to heat and froth milk. If you add milk flavourings, coffee powder or chocolate powder in the frother, ensure you thoroughly clean all parts immediately after use.

## Serving suggestions



The table below lists a selection of quick and easy drinks that can be made using the Milk Heater / Frother. Always ensure that the maximum quantities are observed (as per the Jug markings) depending on the operation you choose.

|                     |                       |                                                                                                                                                                                 |
|---------------------|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Frothed milk</b> | Cappuccino            | - Add 2/3 frothed milk to 1/3 espresso, top with cocoa powder.                                                                                                                  |
|                     | Latte Macchiato       | - Pour frothed milk into a tall glass, add espresso slowly along the rim of the glass.                                                                                          |
|                     | Instant frothy coffee | - Make instant coffee and add frothed milk.<br>- For a milkier version, add instant coffee powder to the milk in the frother jug, then heat and froth using the frothing whisk. |
| <b>Hot milk</b>     | Caffè Latte           | - Add 2/3 heated milk to 1/3 espresso, stir.                                                                                                                                    |
|                     | Hot Chocolate         | - Add chocolate powder to milk in the jug, then heat using the stirring whisk.                                                                                                  |
|                     | Instant milky coffee  | - Make instant coffee and add heated milk.<br>- For a milkier version, add instant coffee powder to the milk in the frother jug, then heat using the heating/stirring whisk.    |

## FAQs



If you encounter problems with or have any questions about your Milk Heater / Frother, check in the table below for solutions to commonly experienced problems. Contact after sales support for advice if the solutions offered do not help you solve the problem.

|                                                                           |                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| What is the small part for that comes at-tached to the shaft?             | The small whisk supplied is for heating and/or stirring drinks, when you do not want to create froth. Unlike the frothing whisk, the heating/stirring whisk has no spiral.                                                                                                                                                          |
| What are the four small plastic pins for on the inside of the lid?        | These four pins are designed to hold a whisk when it is not being used. The two whisks that come with this Milk Heater / Frother are small and can easily get lost in a cutlery drawer. We have provided this extra storage space so you can store one whisk on the shaft inside the jug and the other at the underside of the lid. |
| Can I use the Milk Heater / Frother for heating milk only, without froth? | Yes, use the small heating/stirring whisk (without the spiral) when heating milk only. It helps ensure the milk is heated up evenly and any additives (such as cocoa or instant coffee powder) are thoroughly mixed through.                                                                                                        |
| Why are there two maximum markings inside the jug?                        | The bottom MAX marking is for frothing milk, the top marking for heating or stirring milk only. As frothed milk takes up more space than liquid, the maximum level for frothing is lower. Do not fill the jug past the appropriate MAX markings, as this can cause overflowing.                                                     |
| How do I avoid my milk burning onto the bottom of the jug?                | The stainless steel jug has a non-stick interior coating to prevent milk burning onto the bottom or sticking to the sides of the jug. However, it is very important that you wipe all residues off the walls and the bottom of the jug immediately after use and before frothing the next batch.                                    |

## Other useful information

### Cleaning and maintenance

 **WARNING!**

**Always remove the jug from the power base before cleaning. Never immerse the jug or the base, power cord or mains plug into water or any other liquid. Do not wash in a dishwasher.**

- **The jug:** Clean the jug immediately after heating/frothing milk and before frothing the next batch. Rinse the inside of the jug with warm, soapy water, then rinse again with hot water only and wipe all residues off the walls and the bottom of the jug with a soft cloth. Then dry with a soft, dry cloth.

**IMPORTANT:** Wiping the inside before heating/frothing another quantity is important to prevent milk residues adhering to the walls and the bottom of the jug.

- **The lid:** Separate the silicon ring from the lid before washing/rinsing both pieces in warm, soapy water. Rinse, dry and reassemble the ring onto the lid before reuse or storage.
- **The body:** Clean with a soft cloth only.

**IMPORTANT:** Never use abrasive cleaning agents, metal objects or a hard nylon or metal brush on the Milk Heater / Frother. Abrasive cleaners will scratch the inner and outer surfaces.

- **The base:** Using a soft dry cloth wipe the base to remove any splashes that may be on the surface.
- **The whisks:** Remove the whisks from the jug. Wash with warm water. Dry and store in a safe place, out of young children's reach. Do not wash in a dishwasher.

### Storage

- Ensure the Milk Heater / Frother has completely cooled down and is clean (see above) and completely dry.
- Store the Milk Heater / Frother in its original box or in a clean, dry place out of the reach of children.



## Technical data

|                     |                                                                                                                        |
|---------------------|------------------------------------------------------------------------------------------------------------------------|
| Model:              | MMF-801-V2                                                                                                             |
| Supply voltage:     | 220 - 240 V~, 50-60 Hz                                                                                                 |
| Power consumption:  | 400 W                                                                                                                  |
| Protection Class I: |  (see <b>Explanation of symbols</b> ) |
| Capacity:           | Heating only: 250 ml<br>Stirring only: 250 ml<br>Frothing only: 115 ml<br>Heating & Frothing: 115 ml                   |

## Declaration of Conformity

The conformity of the product with the legally prescribed standards is guaranteed. The conformity declaration can be requested via the data on the warranty card.

## Disposal

### Disposal of packaging



Dispose of the packaging such that it is correctly sorted. Submit cardboard and card to waste paper and foils to the recycling collection.

### Environment Friendly disposal



**Old devices are not permitted to be disposed of with household waste!**

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE) requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "Wheeled Bin" symbol on the product reminds you of your obligation that when you dispose of the appliance, it must be separately collected. Contact your local authority for information concerning the correct disposal of your old appliance.







Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



**PRODUCED IN CHINA FOR:**

ALDI STORES LTD. PO BOX 26, ATHERSTONE,  
WARWICKSHIRE, CV9 2SH.

ALDI STORES (IRELAND) LTD.  
PO BOX 726, NAAS, CO. KILDARE.

Visit us at [www.aldi.com](http://www.aldi.com)

**AFTER SALES SUPPORT**

701200



GB 0800 / 328 6063 IE 1800 / 812 712



[serviceuk@tempo.org](mailto:serviceuk@tempo.org)

MODEL:  
MMF-801-V2

05/2020

**3**  
YEAR  
WARRANTY